


### Zoccoli transistori



Inserito tasto MF  
tastiera vista da  
lato saldatura

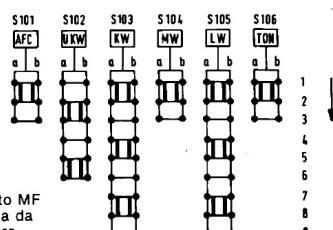

2 SA 683  
2 SC 828  
2 SC 829  
2 SC 1047  
2 SC 1359  
2 SC 1383

BF 240  
BF 241  
BF 255

### Transistori

Posizione	Tipo	Tipo di ricambio
T 1	2 SC 1359 B	BF 255, BF 310, BF 314
T 2	2 SC 1047 B	BF 255, BF 310, BF 314
T 3	2 SC 829 B	BF 241
T 4	2 SC 1359 A	BF 241
T 5, T 7	2 SC 829 A	BF 241
T 6	2 SC 829 B	BF 240
T 8, T 10	2 SC 828 Q	BC 238
T 9	2 SC 828 R	BC 238
T 11	2 SC 1383 Q	BC 338
T 12	2 SA 883 Q	HC 328

### Diodi

Posizione	Tipo	Tipo di ricambio
D 1, D 2, D 5, D 7	1 S 1555	1 N 4148, BA 204
D 3	1 S 2638	BA 124
D 4, D 6, D 8, D 9, D 10	OA 90	AA 112
D 11	KB 265	—
D 12	WZ 065	BZY C 6 V 8
Gr 13	B 20 C 275	—